


excel Environ SR Series Plinth Assembly Instructions

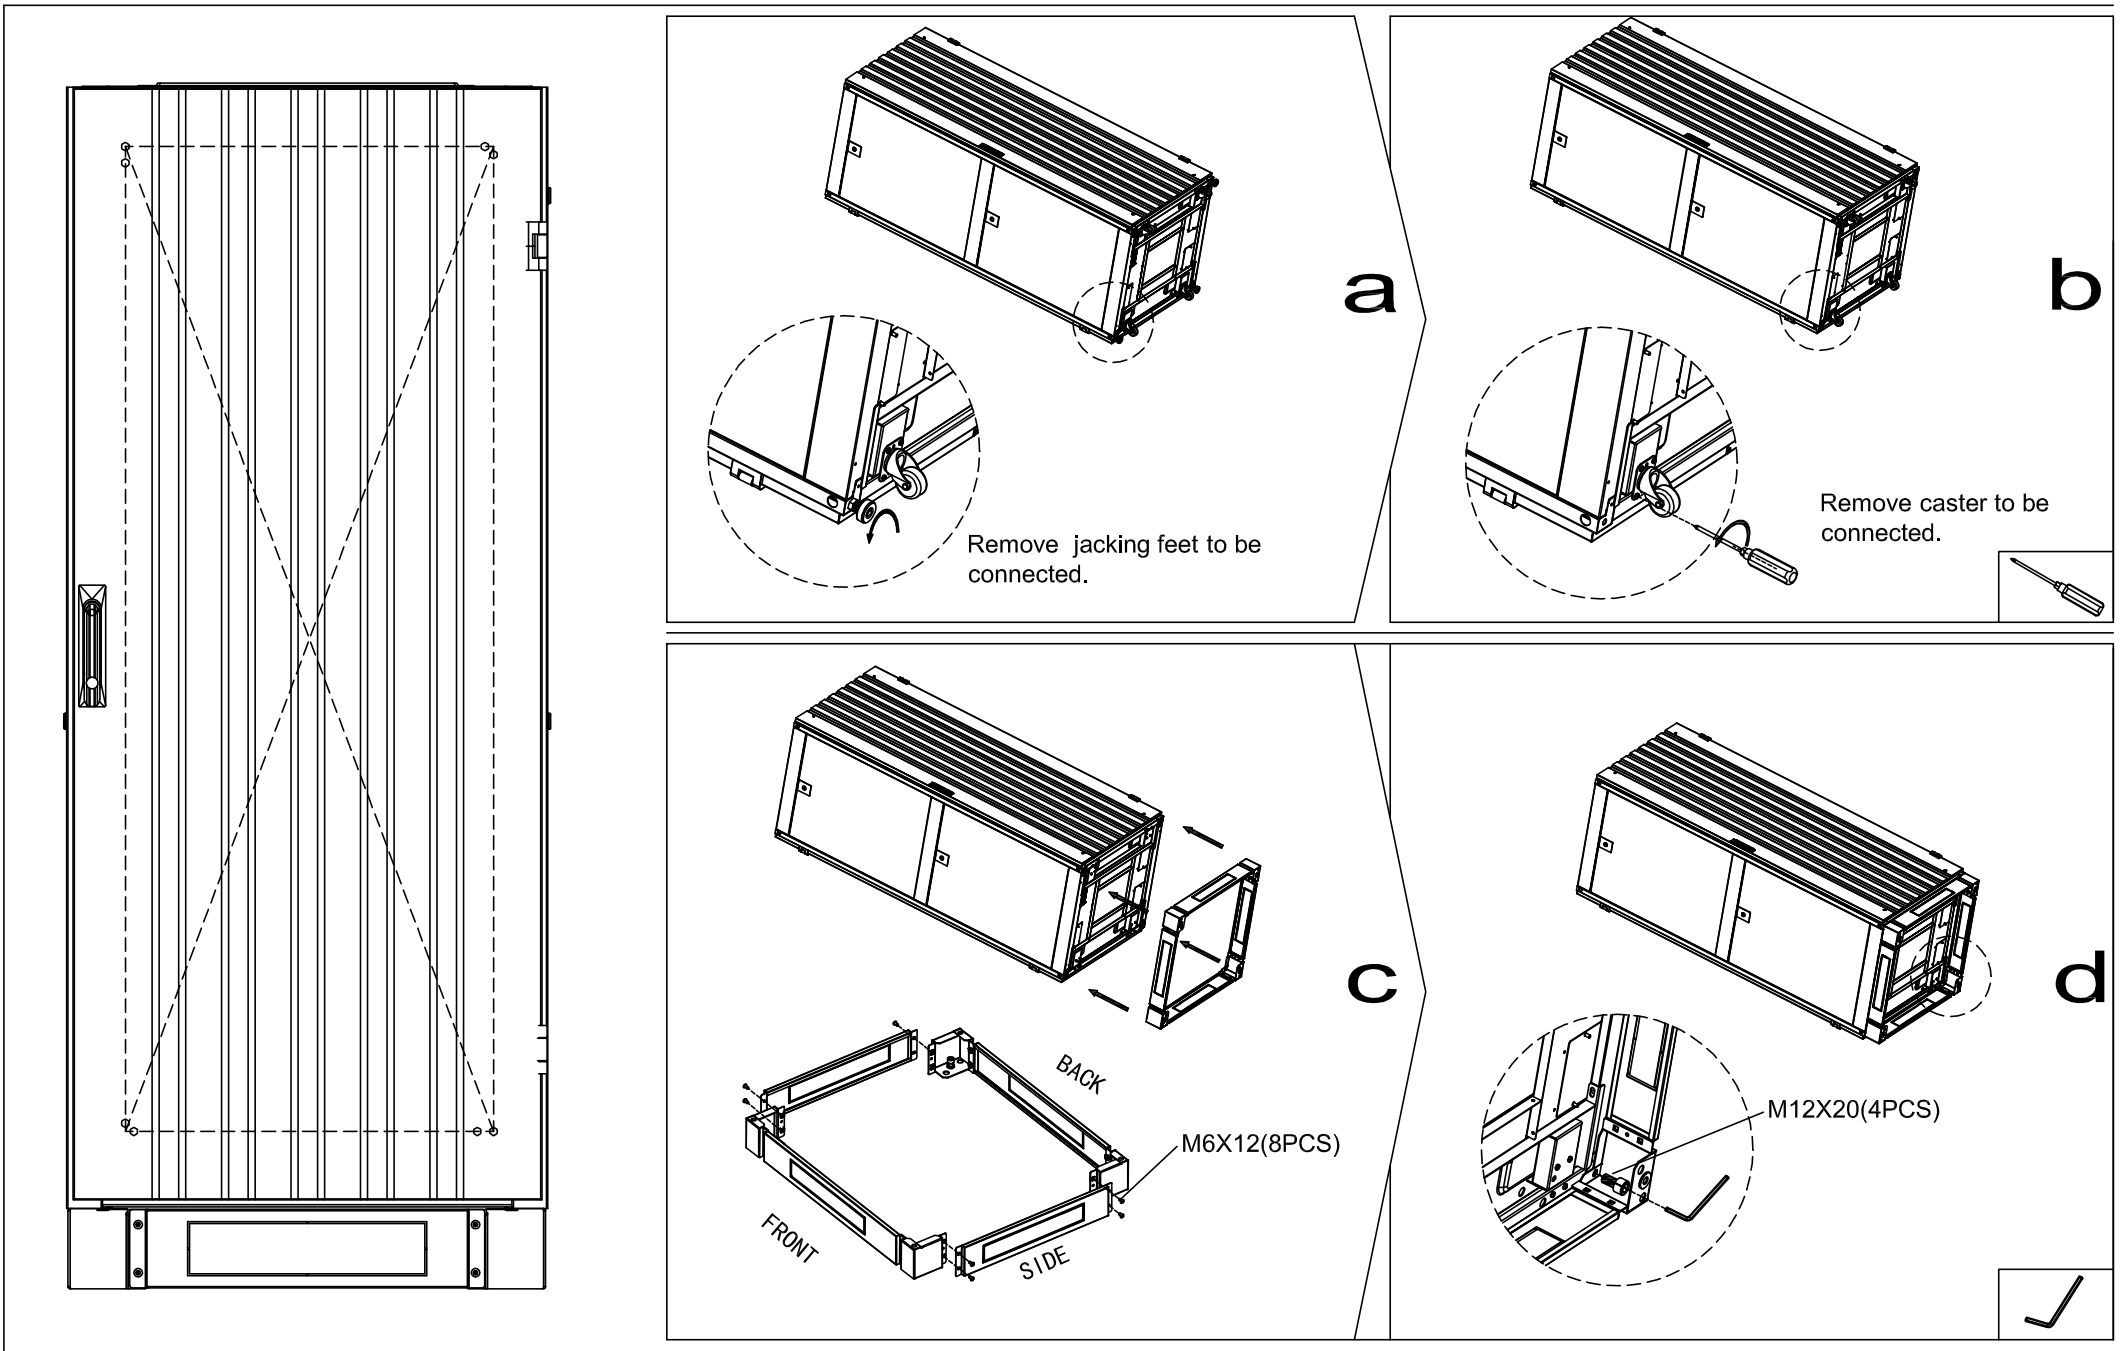

the ground is not level, adjust height of plinth

