

Excel Intelligent PDU Part Number Structure

Management Level

- INT1** = Local and remote overall powering
- INT2** = Local and remote overall and per socket monitoring
- INT3** = Local and remote overall and per socket monitoring and switching
- INT4** = Local and remote overall and per socket switching
- INT5** = Local and remote overall power monitoring to existing passive power units

Outlets: quantity and type

- UKL** = UK 13A Left*
- UKR** = UK 13A Right*
- SCH** = Schuco
- C13** = 10A
- C19** = 16A
- C13L** = 13A Locking
- C19L** = 16A Locking

Length of lead and (T)op or (B)ottom – (just length for Horizontal)

555-1V-C14-INT1-xUKL-xxx-3T

Phase and Orientation

- 1V** = Single Phase Vertical
- 3V** = 3 Phase Vertical
- 1H** = Single Phase Horizontal
- 3H** = 3 Phase Horizontal

Input & Power

- C14** = 10A
- C20** = 16A
- UK** = 13A
- SCH** = 16A
- Com16** = 16A (Commando)
- Com32** = 32A (Commando)
- X** = Open Ended

2nd outlet option, if a 3rd and a 4th required, just insert additional requirements as before

*Selecting Right - this will mean the Earth Pin on the 3 pin plug is to the Right and the lead will be to the left, and if you choose Left the pin will be to the left and the lead will be to the right