



Installation Instructions 100-973


Termination Instructions

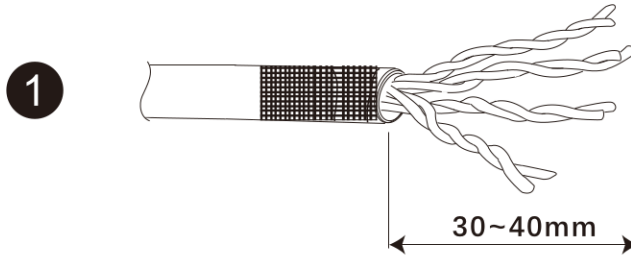


Remove 30~40mm of cable outer jacket. Fold back and remove the foil, keep the drain wire.

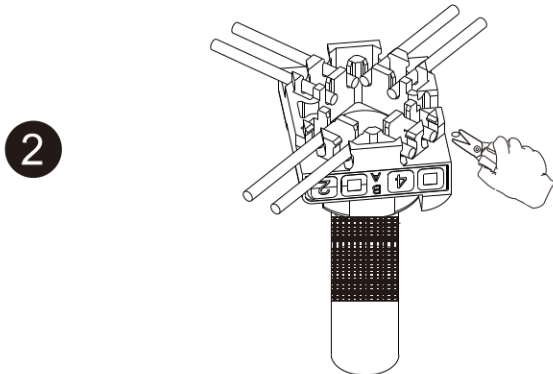


Insert the cable through the termination cap, untwist the four pairs and fan out. Following the colour code on the cap, insert the wires into their designated slots. Double check the wires are in the correct positions and then trim off the excess.

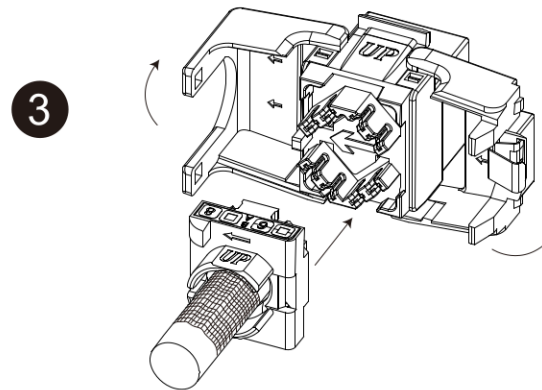

Position the termination cap on the keystone IDCs, in the correct orientation.

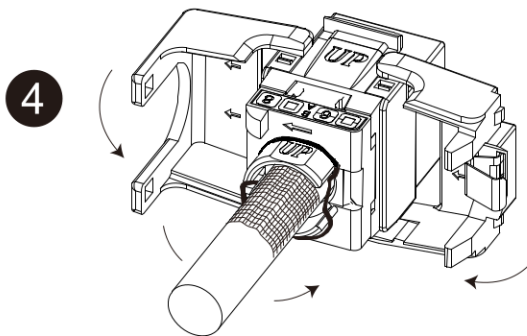

Route the drain out of the left side of the wire manager and then wrap 360 degrees around the wire manager, trim off any excess. Push the termination cap down and then close the wings, use pliers if necessary.

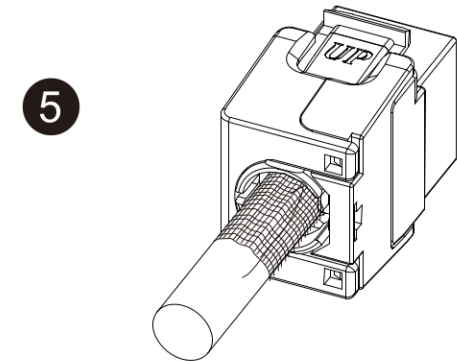

Assemble the keystone jack on face plate or patch panel

JACK PIN DESIGNATIONS		TIA / EIA T568A	TIA / EIA T568B
	1	White/Green	White/Orange
	2	Green	Orange
	3	White/Orange	White/Green
	6	Orange	Green
	4	Blue	Blue
	5	White/Blue	White/Blue
	7	White/Brown	White/Brown
	8	Brown	Brown