



INSTRUCTION SHEET

1

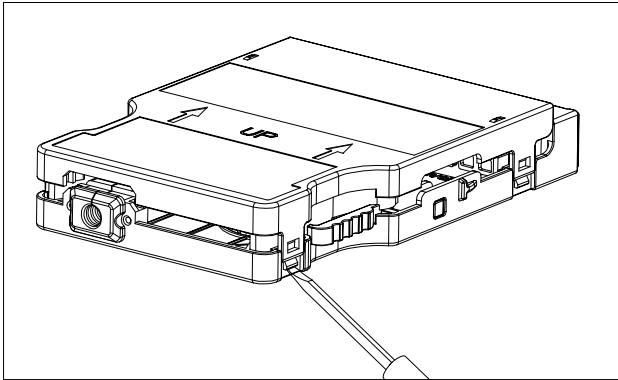


Remove Module upper cover using a flathead screwdriver.

2

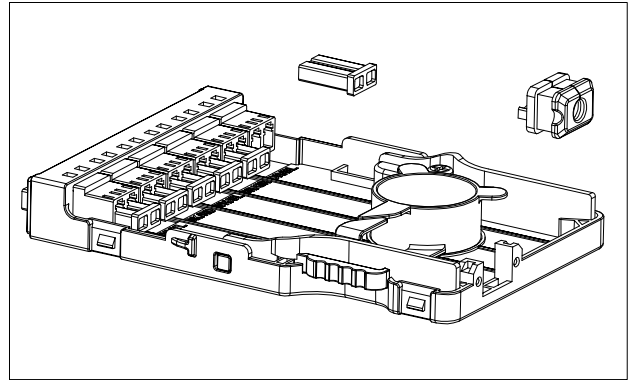


Remove LC dust covers and rubber gland.

3

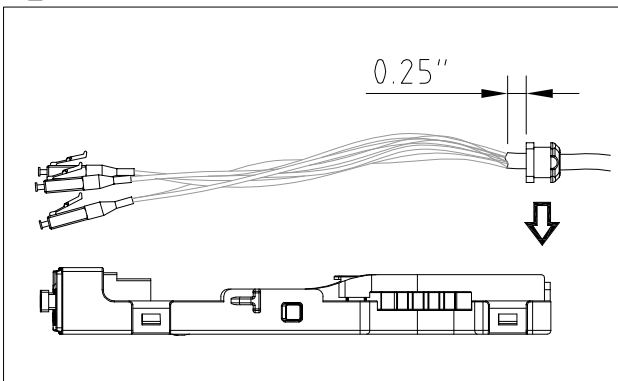


Insert the cable through the gland leaving 6mm (0.25inches) of the sheath on the inside.

4

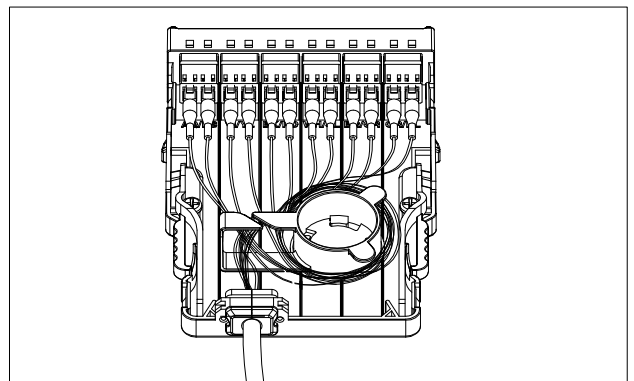


Manage the excess fibre on the spool.

5

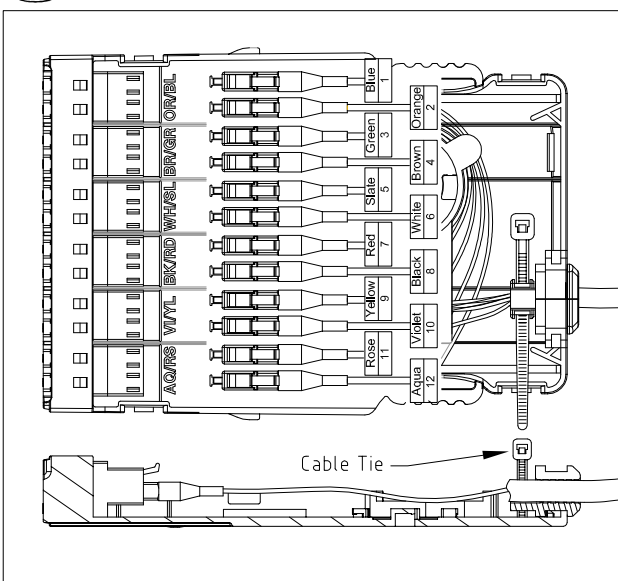

Insert the fibres following the engraved colour codes and secure the cable with the cable tie as indicated.

6

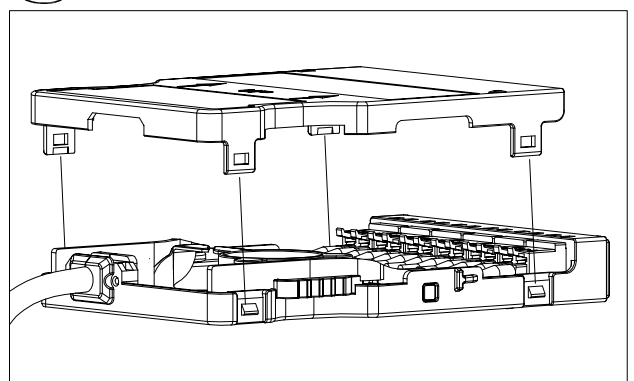

Replace the upper cover.