


# BioLite N2

## 1:1 Scale Drilling Template

Template Instruction.

- 1. Open with Adobe Acrobat Reader.
- 2. Click **File > Print**.
- 3. Select **Actual size**.
- 4. Click **Print**.

DO NOT USE CUSTOM SCALE.

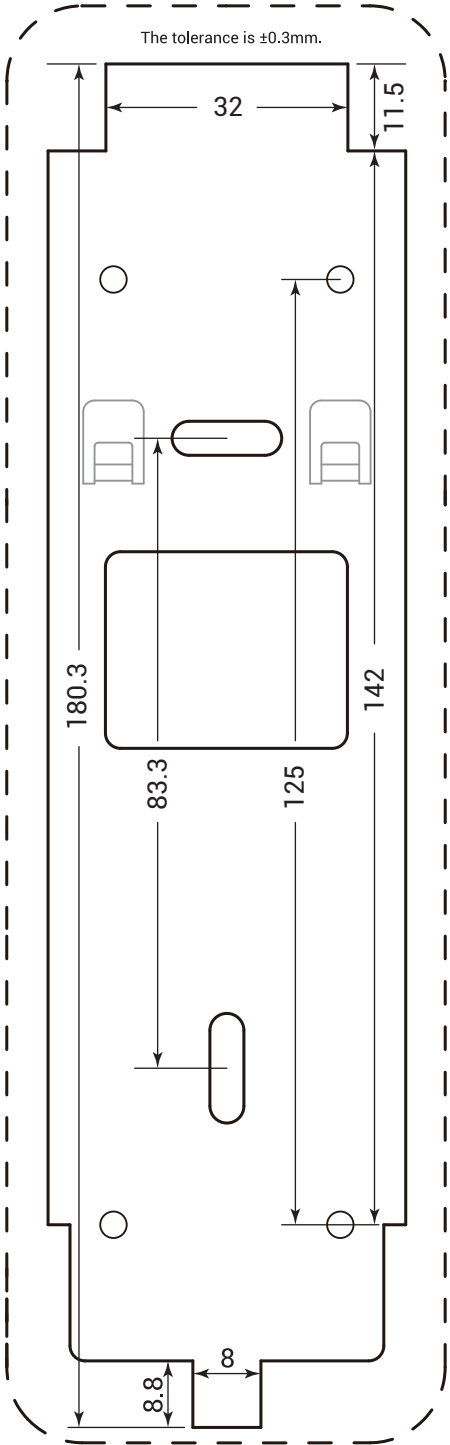

Applicable Model: BLN2-ODB, BLN2-OAB, BLN2-PAB

Suprema Inc.

17F Parkview Tower, 248, Jeongjail-ro, Bundang-gu,  
Seongnam-si, Gyeonggi-do ZIP: 13554 Republic of Korea  
Tel : +82-31-783-4502 E-mail: sales\_sys@supremainc.com  
[www.supremainc.com](http://www.supremainc.com)

©2018 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc. All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies. Product appearance, build status and/or specifications are subject to change without notice.