

1U VSFF INSTALLATION GUIDE

1U Very Small Form Factor (VSFF) Patch Panels


1U VSFF PATCH PANELS

Table of Contents


Body Installation.....	3
Rear Cabling.....	6
Front Cabling	8

1. Body Installation


1.1: Install 3 cage nuts in each side of the mounting profiles.

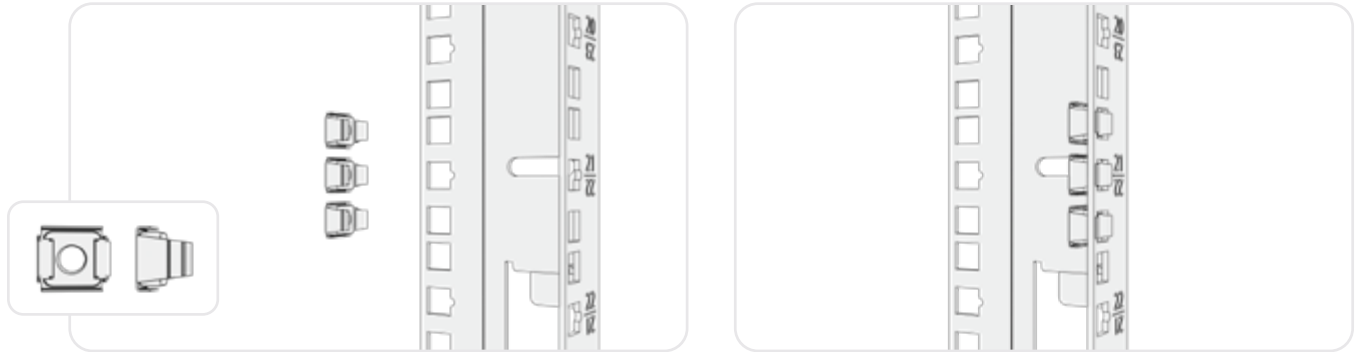



1.2: Install the bottom cage screw each side.

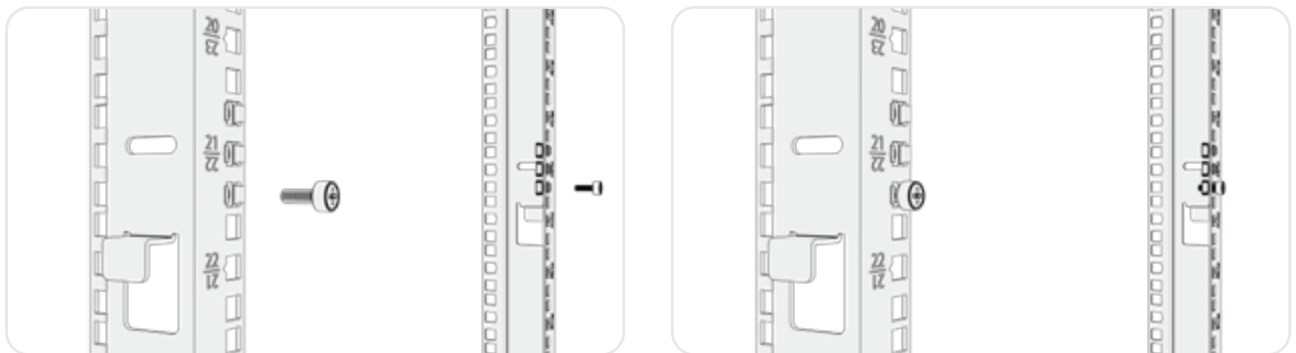


1.3: Mount the panel onto the bottom screw allowing the panel to rest on them.

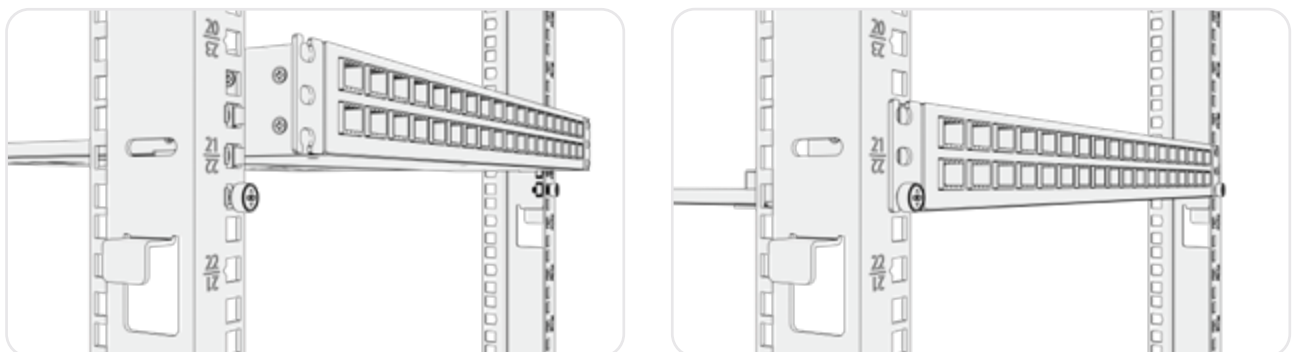



1.4: Install the remaining top 2 screws leaving the central cage nut empty.




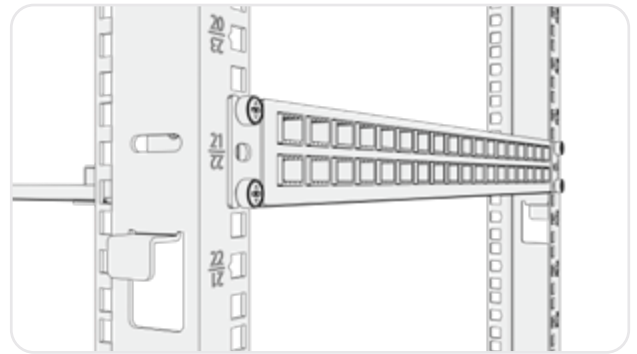
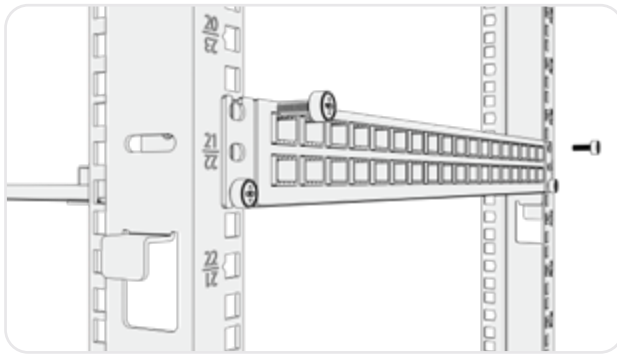


1.5: Tighten all screws ensuring the panel is level and within the designated U space.

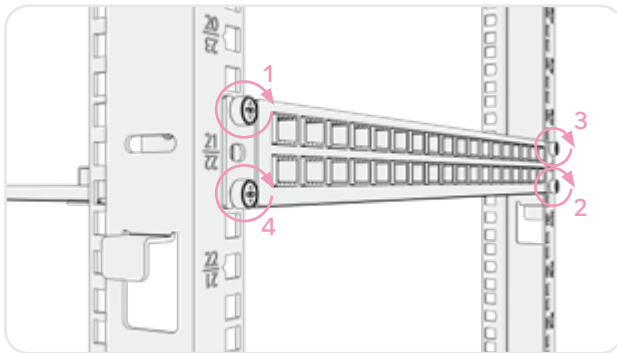


1.6: Install the front management panel using the central cage nut point.

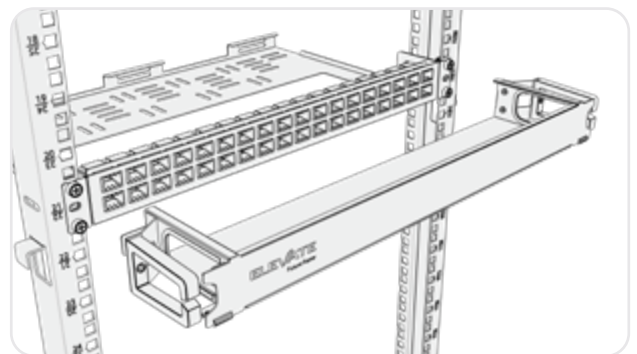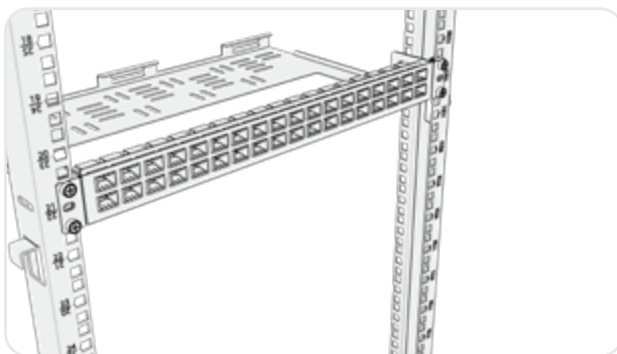

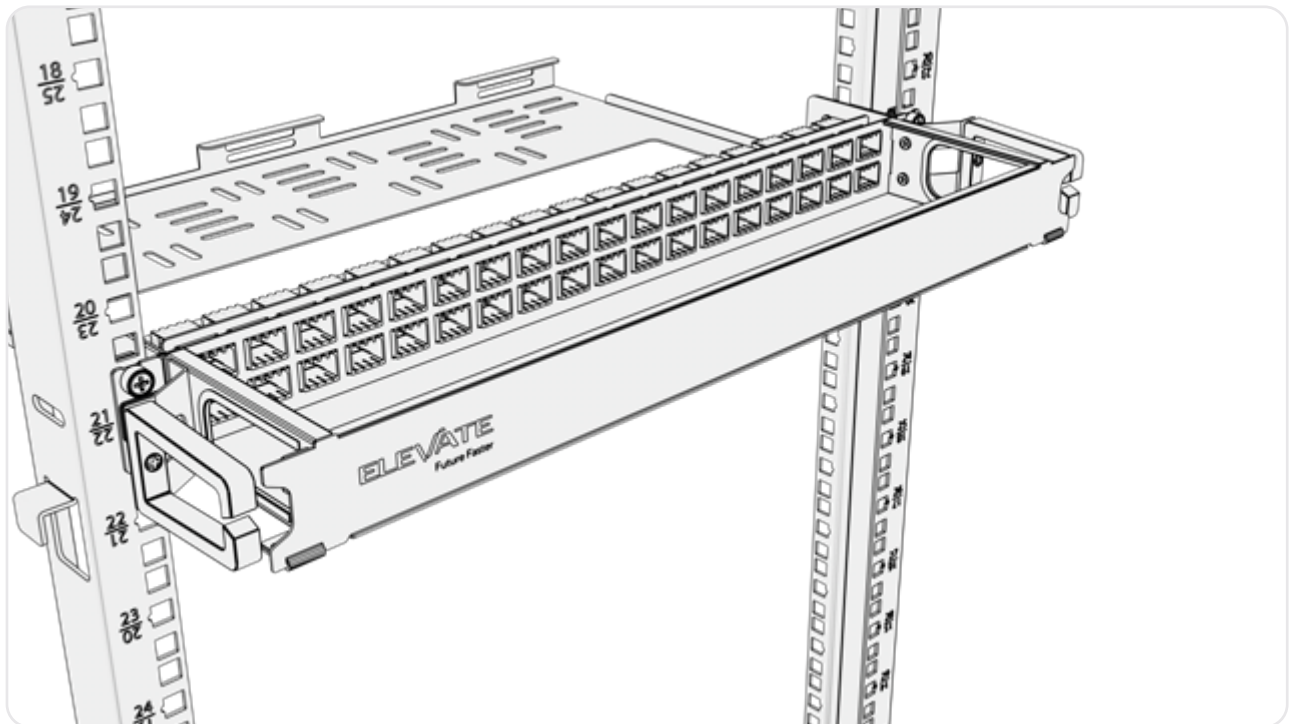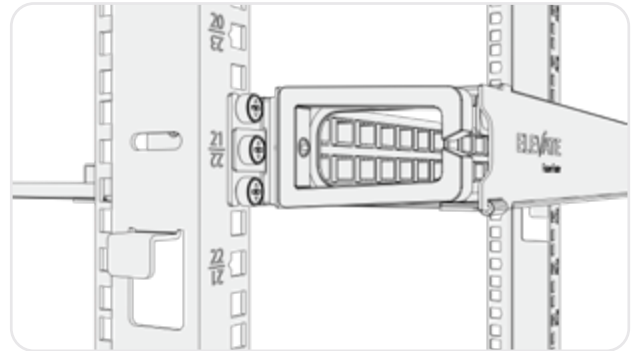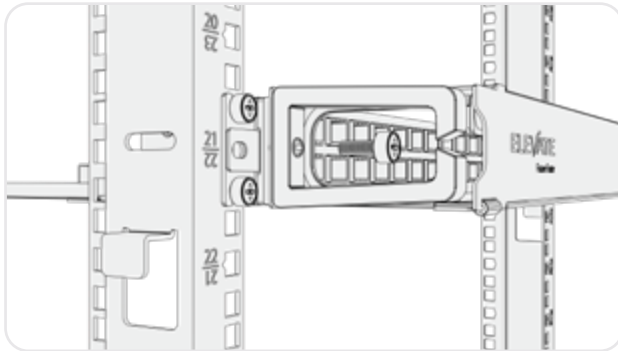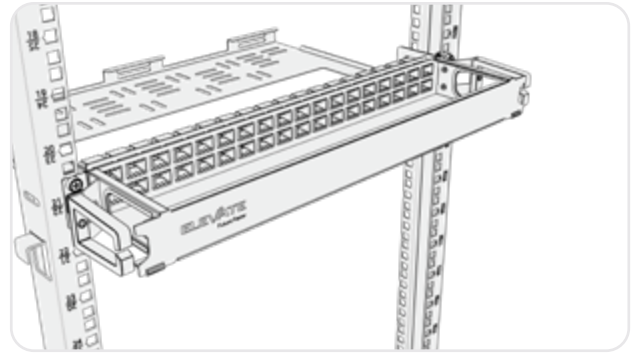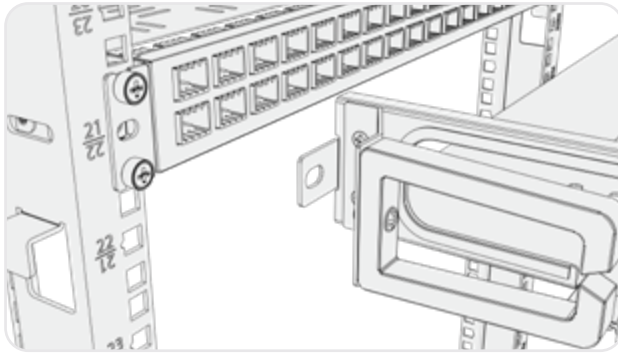

2. Rear Cabling


2.1: Clean all end faces of the SN Connections on the incoming Trunk cable profiles with lint free dry clean cloth.

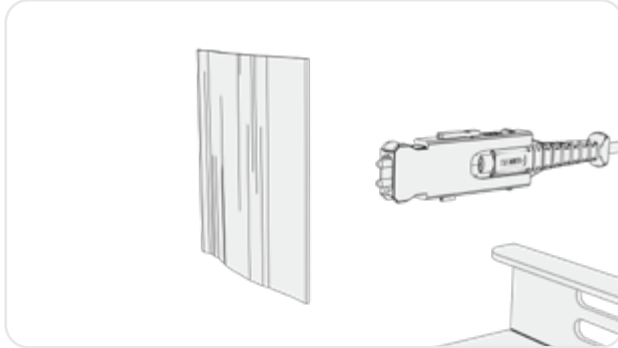



2.2: Clean all end faces on the SN connections.





2.3: Insert all SN to the back of the patch panel.

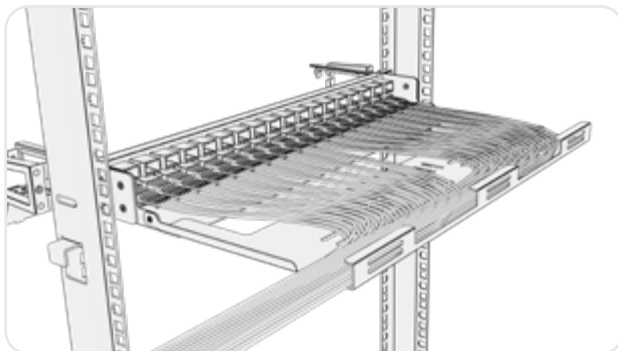

2.4: Dress the patch cables left or right - fix with ties if required.

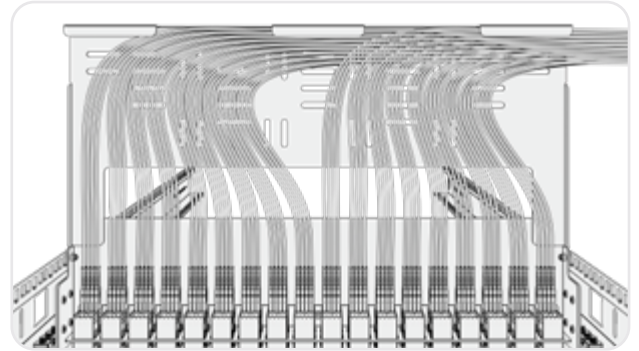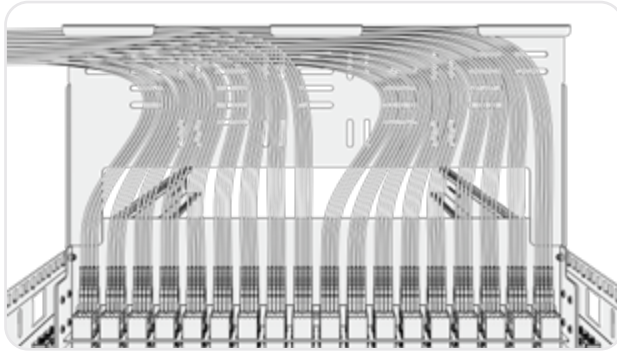


2.5: Fix exiting patch cable to the rear of the tray using Hook and Loop ties.

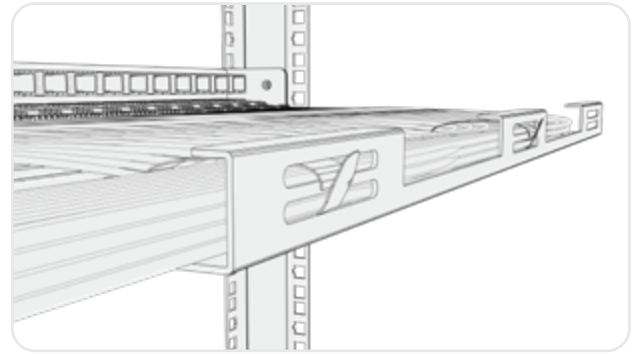
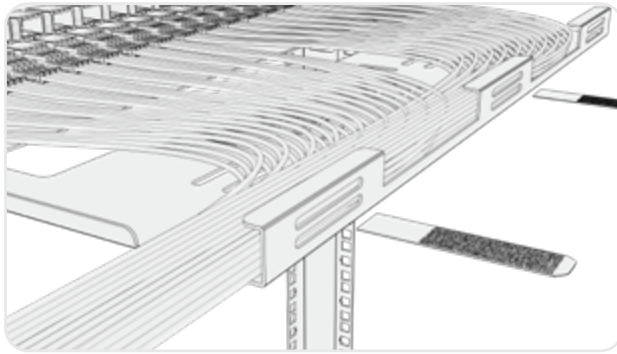


3. Front Cabling

3.1: Clean all end faces of the patch cords with lint free dry clean cloth.

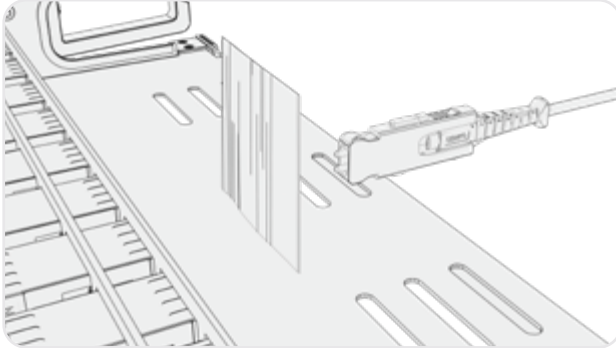


3.2: Clean all end faces of the adaptors and plug in all connectors.

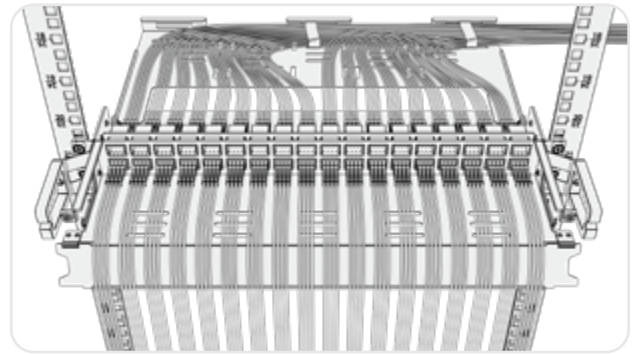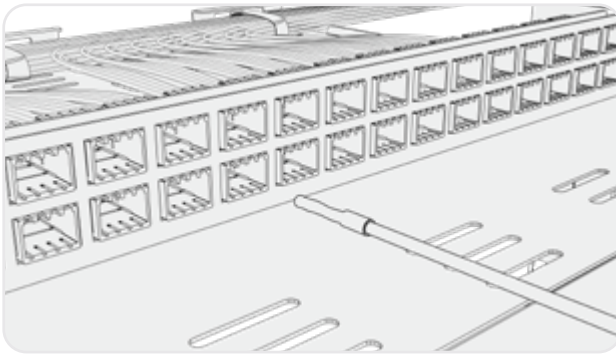

3.3: It is recommended to split the cabling 50% left and 50% right at the front of the patch panel.

3.4: It is recommended to place Velcro ties around each bunch of cables.

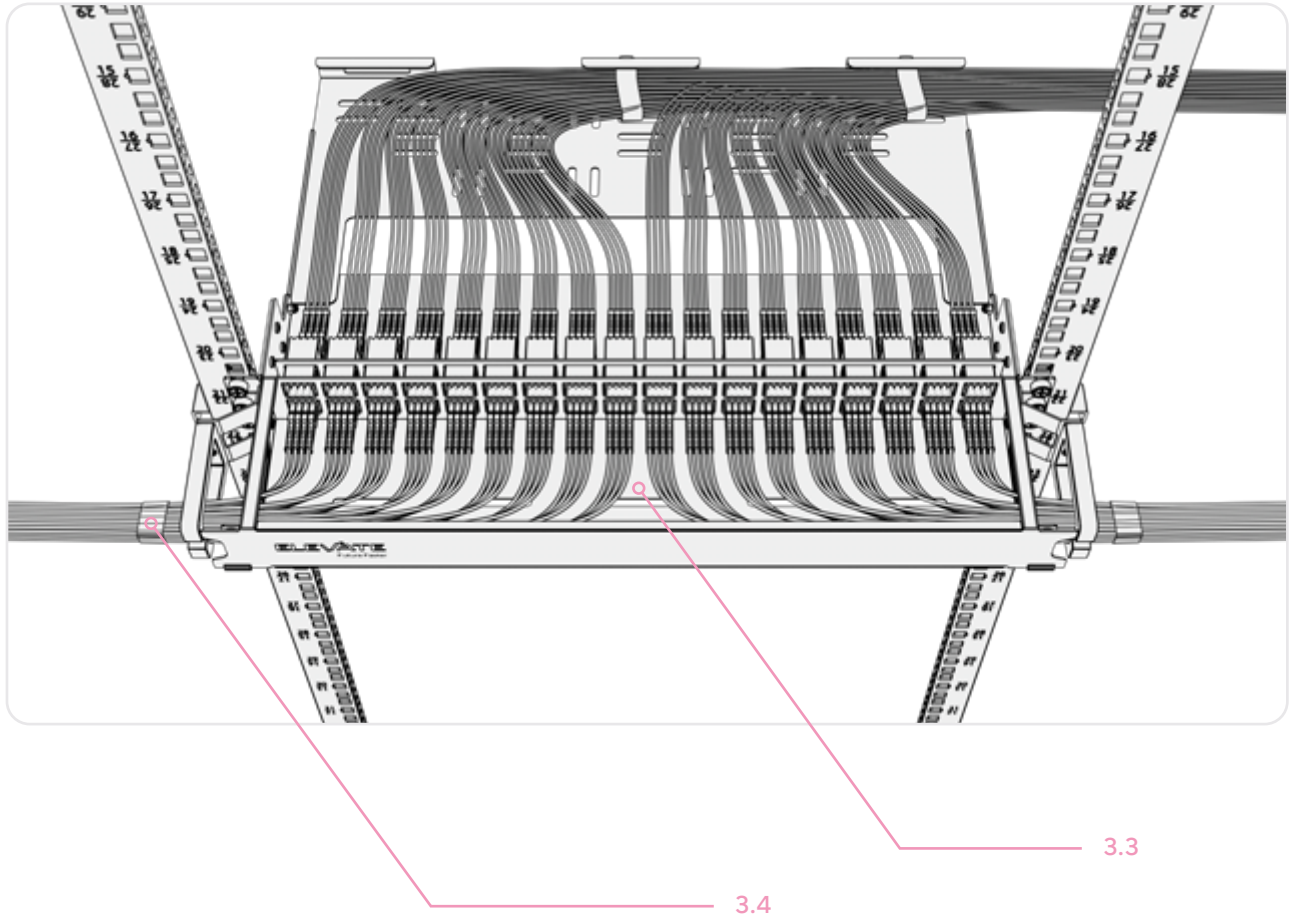

ELEVATE

Future Faster

elevate@excel-networking.com

elevate.excel-networking.com