

# Installation Guide

Avigilon™ High Definition H.264 IP Micro Dome Camera Models:

1.0-H3M-DP1 and 2.0-H3M-DP1

# Important Safety Information

This manual provides installation and operation information and precautions for the use of this camera. Incorrect installation could cause an unexpected fault. Before installing this equipment read this manual carefully. Please provide this manual to the owner of the equipment for future use.



The Warning symbol indicates the presence of dangerous voltage within and outside the product enclosure that may constitute a risk of electric shock, serious injury or death to persons if proper precautions are not followed.



The Caution symbol alerts the user to the presence of hazards that may cause minor or moderate injury to persons, damage to property or damage to the product itself if proper precautions are not followed.



**WARNING** — Failure to observe the following instructions may result in severe injury or death.

- Installation must be performed by qualified personnel only, and must conform to all local codes.
- This product is intended to be used in a Network Environment 0 per IEC TR62101. The camera is to be connected only to PoE network that complies with IEEE 802.3af without routing to the outside plant.



**CAUTION** — Failure to observe the following instructions may result in injury or damage to the camera.

- Do not install near any heat sources such as radiators, heat registers, stoves, or other sources of heat.
- Do not subject the cables to excessive stress, heavy loads or pinching.
- Do not open or disassemble the device. There are no user serviceable parts.
- Refer all servicing to qualified personnel. Servicing may be required when the device has been damaged (such as from a liquid spill or fallen objects), has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not use strong or abrasive detergents when cleaning the device body.
- Use only accessories recommended by Avigilon.

## Regulatory Notices

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

## FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications made to this equipment not expressly approved by Avigilon Corporation or parties authorized by Avigilon Corporation could void the user's authority to operate this equipment.

## Disposal and Recycling Information

When this product has reached the end of its useful life, please dispose of it according to your local environmental laws and guidelines.

Risk of fire, explosion, and burns. Do not disassemble, crush, heat above 100 °C (212 °F), or incinerate.

### European Union:



This symbol means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

## Legal Notices

© 2014 - 2015, Avigilon Corporation. All rights reserved. AVIGILON, the AVIGILON logo, and AVIGILON CONTROL CENTER are trademarks of Avigilon Corporation. Other product names mentioned herein may be the trademarks of their respective owners. The absence of the symbols ™ and ® in proximity to each trademark in this product or its packaging is not a disclaimer of ownership of the related trademark. Unless expressly granted in writing, no license is granted with respect to any copyright, industrial design, trademark, patent or other intellectual property rights of Avigilon Corporation or its licensors.

# Disclaimer

This document has been compiled and published covering the latest product descriptions and specifications. The contents of this document and the specifications of the products discussed herein are subject to change without notice. Neither Avigilon Corporation nor any of its affiliated companies guarantees the completeness or accuracy of the information contained in this document and is not responsible for your use of, or reliance on, the information. Avigilon Corporation shall not be responsible for any losses or damages (including consequential damages) caused by reliance on the information presented herein.

Avigilon Corporation  
<http://www.avigilon.com>

920-0126A

Revision: 4 - EN

20150820


# Table of Contents

|  |    |
|--|----|
| Overview .....   | 1  |
| Housing View .....                                     | 1  |
| Front View .....                                       | 2  |
| Cable Assembly .....                                   | 3  |
| Installation .....                                     | 4  |
| Required Tools and Materials .....                     | 4  |
| Camera Package Contents .....                          | 4  |
| Installation Steps .....                               | 4  |
| Preparing for the Installation .....                   | 4  |
| Connecting Power Over Ethernet (PoE) .....             | 7  |
| Mounting the HD Micro Dome Camera .....                | 9  |
| Assigning an IP Address .....                          | 9  |
| Accessing the Live Video Stream .....                  | 9  |
| Aiming the HD Micro Dome Camera .....                  | 10 |
| For More Information .....                             | 12 |
| LED Indicators .....                                   | 13 |
| Resetting to Factory Default Settings .....            | 14 |
| Setting the IP Address Using the ARP/Ping Method ..... | 15 |
| Cleaning .....   | 16 |
| Dome Bubble .....                                      | 16 |
| Body .....   | 16 |
| Specifications .....                                   | 17 |
| Limited Warranty & Technical Support .....             | 19 |



# Overview

## Housing View

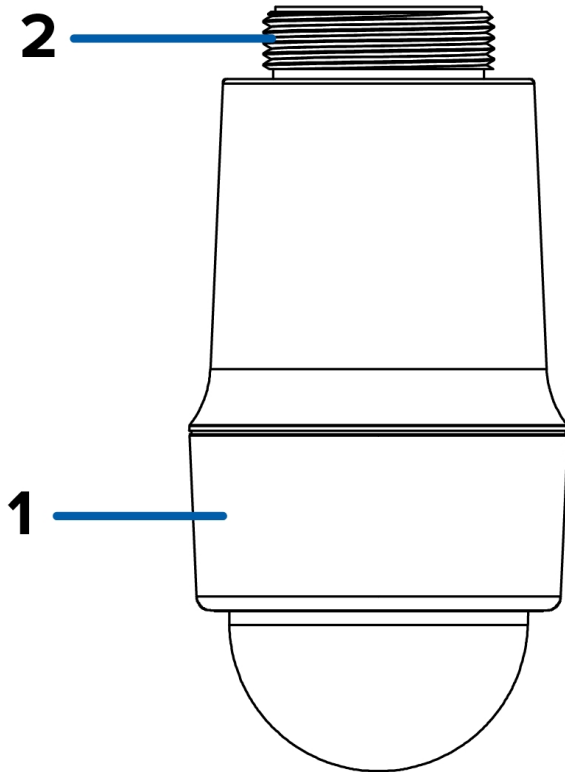


1. **Dome Cover**

Attaches the camera dome bubble to the camera housing.

2. **1.5" Thread**

Thread for mounting the camera onto the mounting conduit.

## Front View

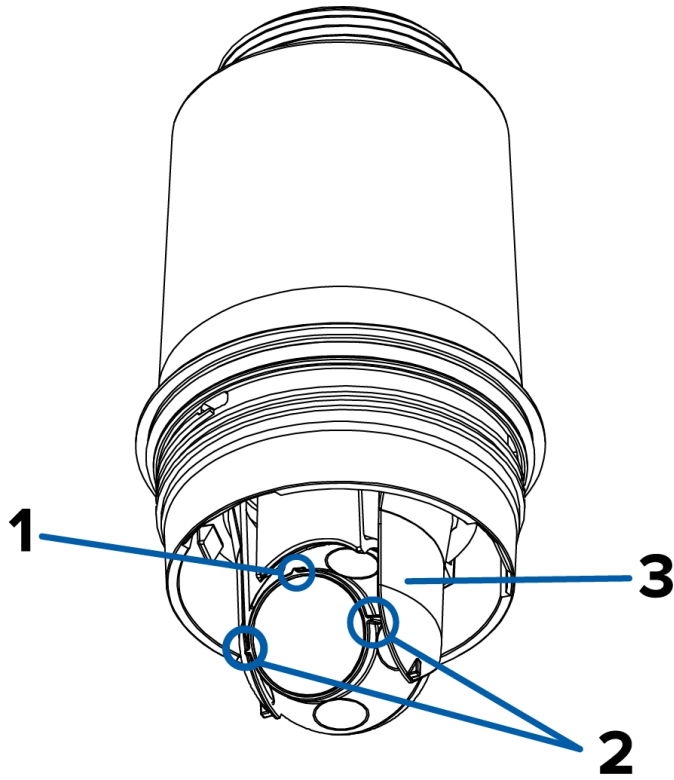

1. **Vertical Marker**

Provides a vertical reference point for the video image. Points up.


2. **Horizon Markers**

Provide reference points for aligning the video image with the horizon line.

3. **Gimbal**

Allows you to move and aim the camera after it has been installed.

## Cable Assembly

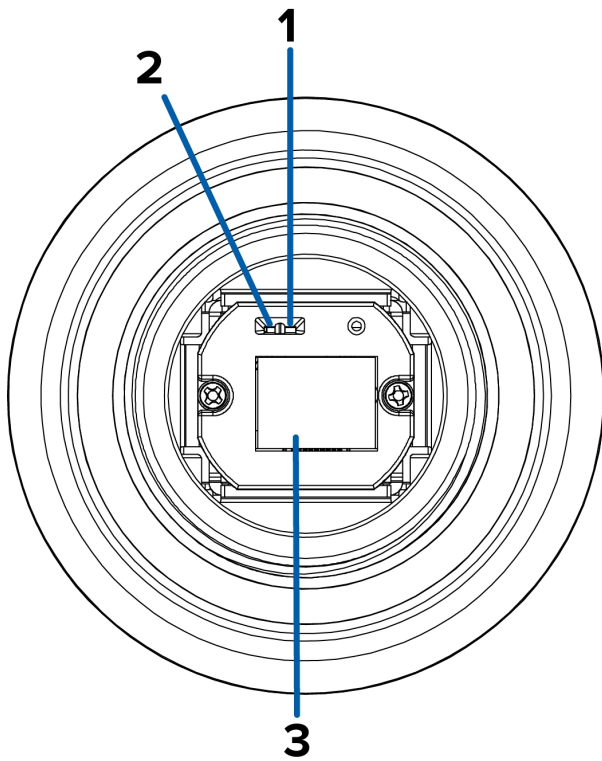

1. **Link LED**

Indicates if there is an active connection in the Ethernet port.

2. **Connection Status LED**

Provides information about device operation. For more information, see *LED Indicators* on page 13

3. **Ethernet Port**

Accepts power and Ethernet connection to the network.

The camera can only be powered by Power over Ethernet (PoE). Server communication and image data transmission also occurs over this connection.



# Installation

## Required Tools and Materials

- Mounting Conduit
- Teflon Tape
- Silicone Sealant

## Camera Package Contents

Ensure the package contains the following:

- Avigilon™ HD Micro Dome Camera
- 3/4" NPT Female Adapter
- Foam Sealing Gasket

## Installation Steps

Complete the following steps to install the device:

---


|   |    |
|---|----|
| <i>Preparing for the Installation</i> .....       | 4  |
| <i>Connecting Power Over Ethernet (PoE)</i> ..... | 7  |
| <i>Mounting the HD Micro Dome Camera</i> .....    | 9  |
| <i>Assigning an IP Address</i> .....              | 9  |
| <i>Accessing the Live Video Stream</i> .....      | 9  |
| <i>Aiming the HD Micro Dome Camera</i> .....      | 10 |

### Preparing for the Installation


**NOTE:** The camera supports mounting to either male 3/4" NPT or female 1.5" NPT.

1. Connect the NPT adapter

- If using the provided 3/4" NPT adapter
  - a. Wrap the threads at the end of the mounting conduit three to five times with Teflon tape.

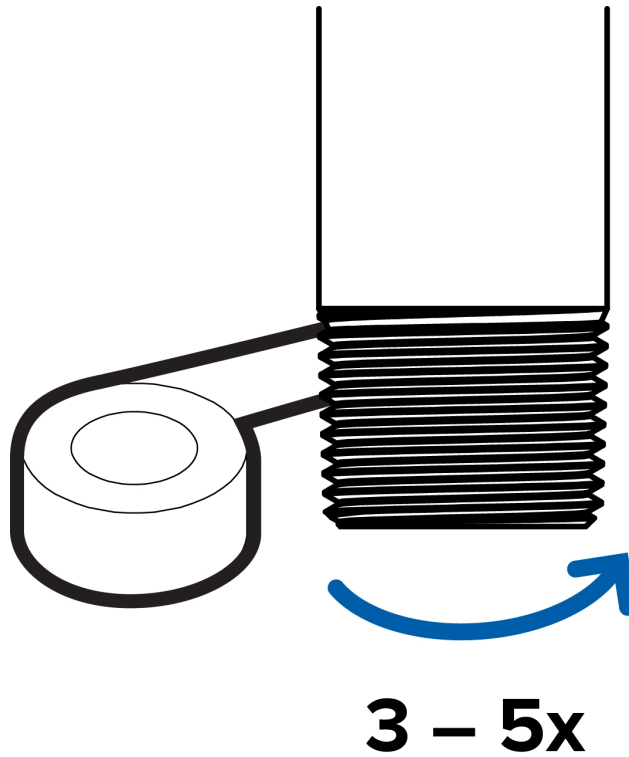

- b. Thread the adapter onto the mounting conduit.

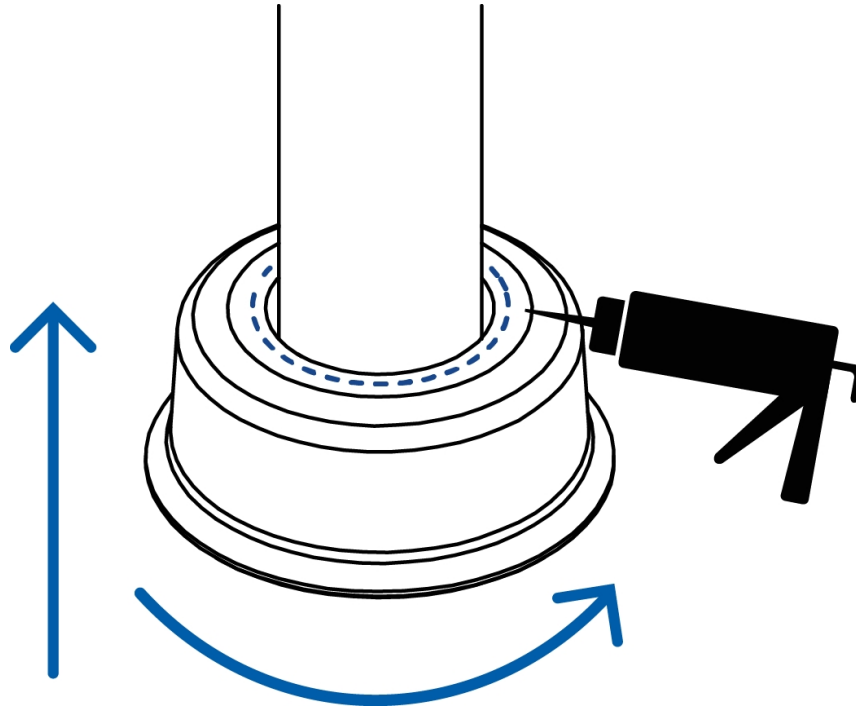


- c. Apply silicone sealant to the base of the adapter to prevent moisture from entering the camera.
- If using another adapter
    - a. Attach the adapter to the mounting conduit.

**NOTE:** If using a different adapter than the one provided by Avigilon, ensure that the camera housing is sealed from moisture.

## 2. Preparing the Ethernet Connector:

- a. Pull the Ethernet cable through the mounting conduit.

**NOTE:** Extend the cable 50 mm or 2" past the NPT adapter.

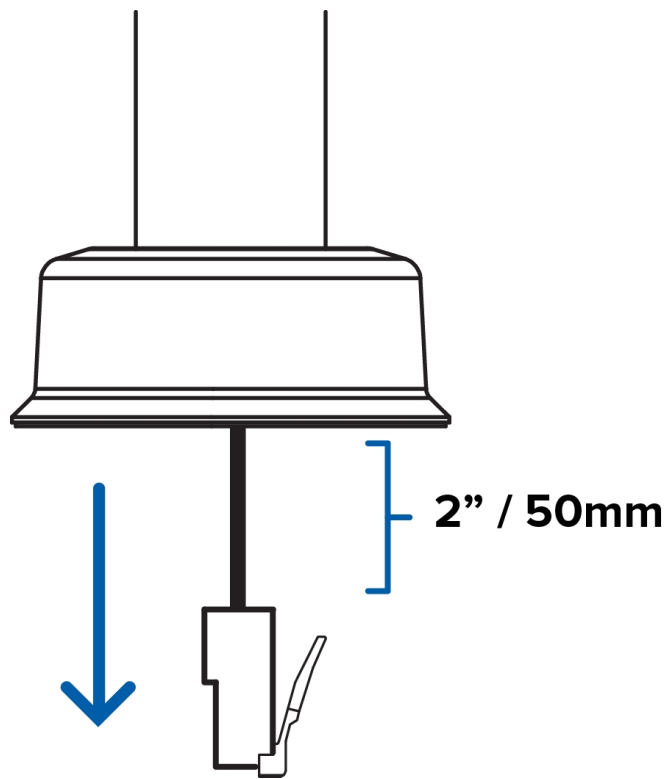


- b. Crimp the end of the mounting conduit's Ethernet cable with an Ethernet connector.


### Connecting Power Over Ethernet (PoE)

**NOTE:** The HD Micro Dome camera can only be powered by Power over Ethernet (PoE).

1. Place the foam gasket onto the camera housing.

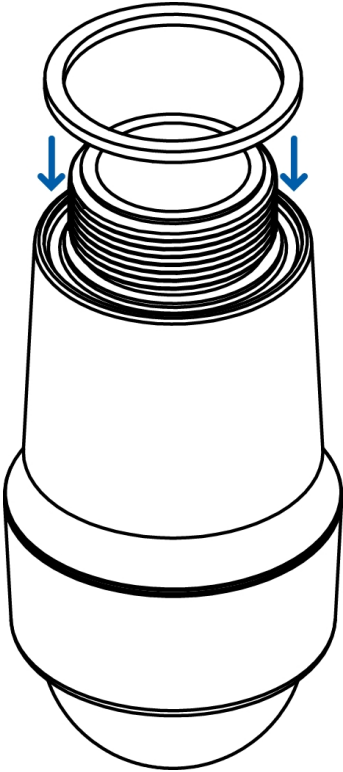


2. Connect the mounting conduit's Ethernet connector to the camera's Ethernet port.

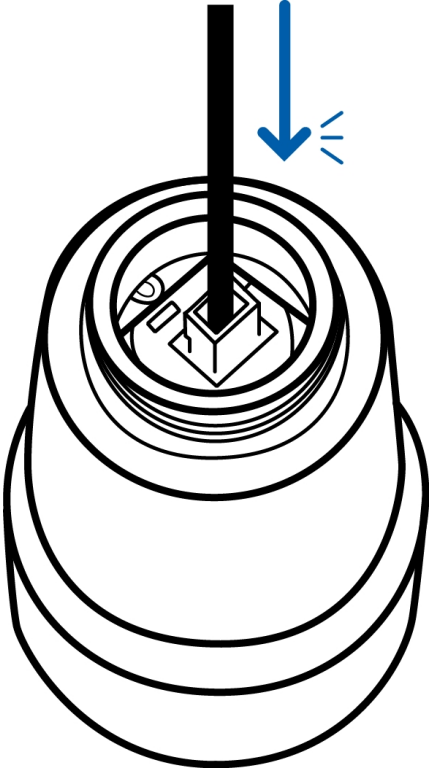

3. Check that the camera's status LEDs indicate the correct state. For more information, see *LED Indicators* on page 13.

## Mounting the HD Micro Dome Camera

- Thread the camera housing onto the NPT adapter.

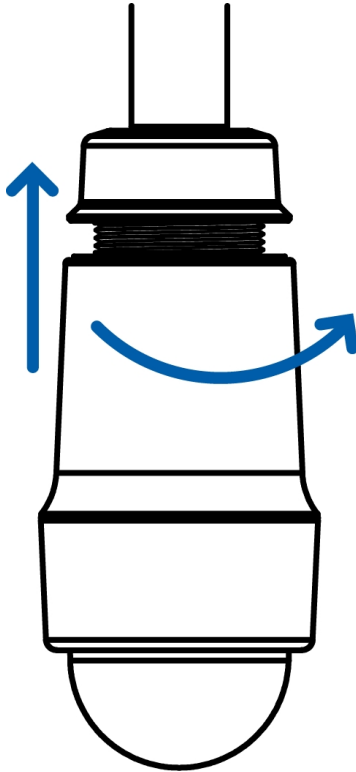

## Assigning an IP Address

The camera automatically obtains an IP address when it is connected to a network.

**NOTE:** If the camera cannot obtain an IP address from a DHCP server, it will use Zero Configuration Networking (Zeroconf) to choose an IP address. When set using Zeroconf, the IP address is in the 169.254.0.0/16 subnet.

The IP address settings can be changed using one of the following methods:

- Camera's web browser interface: `http://<camera IP address>/`
- ARP/Ping method. For more information, see *Setting the IP Address Using the ARP/Ping Method* on page 15
- Network Video Management software application (for example, Avigilon™ Control Center).

**NOTE:** The default camera username is `admin` and the default password is `admin`.

## Accessing the Live Video Stream

Live video stream can be viewed using one of the following methods:


- Web browser interface: `http://<IP address>/`
- Network Video Management software application (for example, the Avigilon Control Center software).

**NOTE:** The default camera username is `admin` and the default camera password is `admin`.

## Aiming the HD Micro Dome Camera


1. Unscrew the dome cover from the camera housing.

**NOTE:** You must hold the housing to ensure that the camera housing does not rotate. Do not hold the camera dome bubble. The resulting fingerprints may affect the overall image quality.

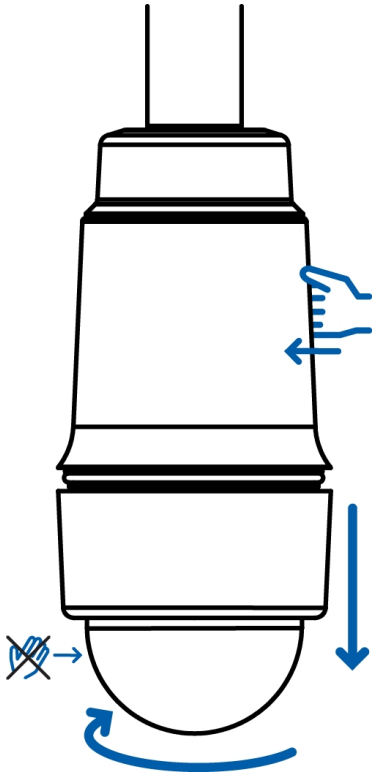


2. Turn the gimbal and rotate the camera ball until it faces the direction you want.

**Tip:** Use the vertical marker and the horizon markers as guides.

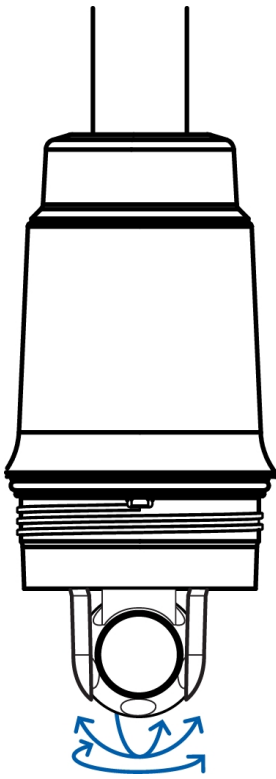

3. Screw the dome cover back onto the base.

**NOTE:** You must hold the base to ensure the camera does not rotate. Do not hold the camera dome bubble. The resulting fingerprints may damage the overall image quality.

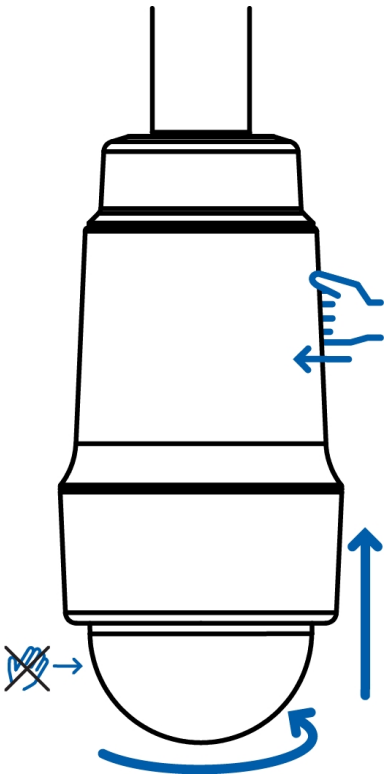



## For More Information

Additional information about setting up and using the device is available in the following guides:

- *Avigilon™ Control Center Client User Guide*
- *Avigilon™ High Definition H.264 Web Interface User Guide*

The manuals are available on the Avigilon website: <http://avigilon.com/support-and-downloads>



# LED Indicators

Once connected to the network, the Connection Status LED will display the progress in connecting to the Network Video Management software.


The following table describes what the LEDs indicate:

| <b>Connection State</b> | <b>Connection Status LED</b>                      | <b>Description</b>  |
|-------------------------|---|---|
| Obtaining IP Address    | One short flash every second                      | Attempting to obtain an IP address.   |
| Discoverable            | Two short flashes every second                    | Obtained an IP address but is not connected to the Network Video Management software. |
| Upgrading Firmware      | Two short flashes and one long flash every second | Updating the firmware.  |
| Connected               | On  | Connected to the Network Video Management software.                                   |

# Resetting to Factory Default Settings

If the camera no longer functions as expected, you can choose to reset the camera to its factory default settings.

Use the firmware revert button to reset the camera.

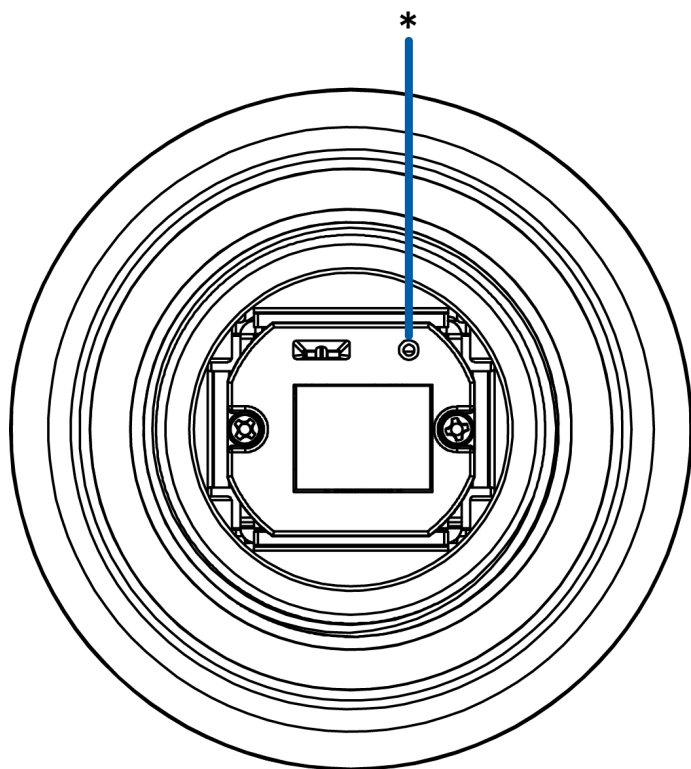

**Figure 1:** The firmware revert button on the cable assembly.

1. Disconnect power from the device.
2. Using a straightened paperclip or similar tool, gently press and hold the firmware revert button.
3. While continuing to hold the button, power the device.

Release the button after three seconds.



**CAUTION** — Do not apply excessive force. Inserting the tool too far will damage the device.

# Setting the IP Address Using the ARP/Ping Method

Complete the following steps to configure the camera to use a specific IP address:

1. Locate and copy down the MAC Address (MAC) listed on the Serial Number Tag for reference.
2. Open a Command Prompt window and enter the following commands:
  - a. `arp -s <New Camera IP Address> <Camera MAC Address>`  
For example: `arp -s 192.168.1.10 00-18-85-12-45-78`
  - b. `ping -l 123 -t <New Camera IP Address>`  
For example: `ping -l 123 -t 192.168.1.10`
3. Reboot the camera.
4. Close the Command prompt window when you see the following message:  
`Reply from <New Camera IP Address>: ...`

# Cleaning

## Dome Bubble

If the video image becomes blurry or smudged in areas, it may be because the dome bubble requires cleaning.

To clean the dome bubble:

- Use hand soap or a non-abrasive detergent to wash off dirt or finger prints
- Use a microfiber cloth or non-abrasive fabric to dry the dome bubble.

**Important:** Failure to use the recommended cleaning materials may result in a damaged or scratched dome bubble that will negatively impact image quality and result in unwanted IR light reflecting into the lens.

## Body

- Use a dry or lightly dampened cloth to clean the camera body.

Do not use strong or abrasive detergents.



# Specifications

## Camera

|      |                   |
|------|-------------------|
| Lens | Lens 2.8 mm, F2.0 |
|------|-------------------|

## Network

|                     |   |
|---------------------|---|
| Network             | 100Base-TX  |
| Cabling Type        | CAT5  |
| Connector           | RJ-45   |
| ONVIF               | ONVIF compliance version 1.02, 2.00, Profile S ( <a href="http://www.onvif.org">www.onvif.org</a> )   |
| Security            | Password protection, HTTPS encryption, digest authentication, WS authentication, user access log, 802.1x port based authentication  |
| Streaming Protocols | IPv4, HTTP, HTTPS, SOAP, DNS, NTP, RTSP, RTCP, RTP, TCP, UDP, IGMP, ICMP, DHCP, Zeroconf, ARP RTP/UDP, RTP/UDP multicast, RTP/RTSP/TCP, RTP/RTSP/HTTP/TCP, RTP/RTSP/HTTPS/TCP |

## Mechanical

|                  |   |
|------------------|---|
| Dimensions ØxH   | 77.20 mm x 153.80 mm (3.03" x 6.06")  |
| Weight           | 466 g (16.44 oz)<br>+ 58 g (2.05 oz) for adapter  |
| Body             | Aluminum  |
| Housing          | Pendant mount, vandal resistant<br>Optional 1.5 inch NPT male adapter and ¾ inch NPT female adapter |
| Finish           | Powder coat, RAL 9003 (RAL 9005 for -BL model)  |
| Adjustment Range | 360° pan, 90° tilt, 360° azimuth  |

## Electrical

|                   |                                    |
|-------------------|------------------------------------|
| Power Consumption | 4 W max                            |
| Power Source      | PoE: IEEE802.3af Class 1 compliant |

## Environmental

|                       |                                     |
|-----------------------|-------------------------------------|
| Operating Temperature | -10 °C to +50 °C (14 °F to 122 °F)  |
| Storage Temperature   | -30 °C to +70 °C (-22 °F to 158 °F) |
| Humidity              | 0-95% non-condensing                |

## Certifications

|                |                                 |
|----------------|---------------------------------|
| Certifications | UL<br>cUL<br>CE<br>ROHS<br>WEEE |
|----------------|---------------------------------|

|                           |  |
|---------------------------|--|
|                           | RCM<br>EAC<br>KC   |
| Safety                    | UL 60950-1<br>CSA 60950-1<br>IEC/EN 60950-1                              |
| Environmental             | IP55 Weather Rating<br>IK10 Impact Rating                                |
| Electromagnetic Emissions | FCC Part 15 Subpart B Class B<br>EN 55022 Class B<br>IC ICES-003 Class B |
| Electromagnetic Immunity  | EN 55024<br>EN 61000-6-1   |



# Limited Warranty & Technical Support

Avigilon warrants to the original consumer purchaser, that this product will be free of defects in material and workmanship for a period of 3 years from date of purchase.

The manufacturer's liability hereunder is limited to replacement of the product, repair of the product or replacement of the product with repaired product at the discretion of the manufacturer. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering or other causes not arising from defects in material or workmanship. This warranty extends to the original consumer purchaser of the product only.

AVIGILON DISCLAIMS ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EXCEPT TO THE EXTENT THAT ANY WARRANTIES IMPLIED BY LAW CANNOT BE VALIDLY WAIVED.

No oral or written information, advice or representation provided by Avigilon, its distributors, dealers, agents or employees shall create another warranty or modify this warranty. This warranty states Avigilon's entire liability and your exclusive remedy against Avigilon for any failure of this product to operate properly.

In no event shall Avigilon be liable for any indirect, incidental, special, consequential, exemplary, or punitive damages whatsoever (including but not limited to, damages for loss of profits or confidential or other information, for business interruption, for personal injury, for loss of privacy, for failure to meet any duty including of good faith or of reasonable care, for negligence, and for any other pecuniary or other loss whatsoever) arising from the use of or inability to use the product, even if advised of the possibility of such damages. Since some jurisdictions do not allow the above limitation of liability, such limitation may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction.

**Warranty service and technical support can be obtained by contacting Avigilon Technical Support by phone at 1.888.281.5182 or via email at [support@avigilon.com](mailto:support@avigilon.com).**