

XPass D2

# INSTALLATION GUIDE

Version 1.03  
English

EN 101.00.XPD2-MDB V1.03A

# Contents

---

|   |           |
|---|-----------|
| <b>Safety instructions.....</b>           | <b>3</b>  |
| <b>Introduction .....</b>                 | <b>5</b>  |
| Components .....                          | 5         |
| Name and function of each part.....       | 6         |
| Cables and connectors .....               | 7         |
| <b>Installation .....</b>                 | <b>8</b>  |
| Fixing the bracket and the product.....   | 8         |
| Cable connection.....                     | 10        |
| Power supply connection .....             | 10        |
| RS-485 connection .....                   | 10        |
| Wiegand and other cable connections ..... | 11        |
| Restoring the Factory Defaults .....      | 11        |
| Resetting the baud rate of RS-485.....    | 11        |
| <b>Product specifications.....</b>        | <b>12</b> |
| Dimensions.....                           | 13        |
| <b>FCC compliance information .....</b>   | <b>14</b> |
| <b>Appendices.....</b>                    | <b>15</b> |
| Disclaimers .....                         | 15        |
| Copyright notice.....                     | 15        |
| Open Source License .....                 | 15        |
| MIT License .....                         | 15        |

# Safety instructions

Observe the following instructions to use the product safely and prevent any risk of injury or property damage.

## Warning

Noncompliance of instructions could lead to serious injury or death.

### Installation

**Do not install the product in a place with direct sunlight, moisture, dust, or soot.**

- A fire or electric shock may occur.

**Do not install the product in a place with heat from an electric heater.**

- A fire or electric shock may occur due to overheating.

**Install the product in a dry place.**

- Otherwise, a product damage or electric shock may occur due to moisture.

**Install the product in a place with no electromagnetic interference.**

- Otherwise, a product damage or electric shock may occur.

**The user should not install or repair the product independently.**

- A fire, electric shock, or personal injury may occur.
- If the product has been damaged due to independent installation or repair of the product by the user, free A/S service will not be provided.

### Operation

**Do not allow liquids such as water, beverages, or chemicals get into the product.**

- A fire, electric shock, or product damage may occur.

## Caution

Noncompliance of instructions could lead to minor injury or product damage.

### Installation

**Do not install the power supply cable in a place where people pass by.**

- Product damage or physical injury may occur.

**Do not install the product near a highly magnetic object such as a magnet, TV, (especially CRT) monitor, or speaker.**

- A product failure may occur.

**If installing the product outside where the product is completely exposed, it is recommended to install the product together with the enclosure.**

**Keep the minimum separation distances between the devices when install multiple devices.**

- Otherwise, RF performance is affect to the other device, the devices may not operate normally.

## Operation

**Do not drop the product or apply an impact to the product.**

- A product failure may occur.

**When cleaning the product, wipe the product with a soft and dry cloth and no water, benzene or alcohol.**

- Otherwise, a product failure may occur.

# Introduction


## Components



XPass D2



Wall Bracket

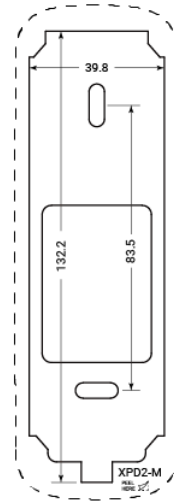


Drilling Template



Wall Fixing Screw x 2

Bracket Fixing Screw  
(Star Shaped)

PVC Anchor x 2

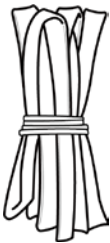120  $\Omega$  resistor

Shrink Tube



Quick Guide




Open Source Software Guide

### NOTE


- Components may vary according to the installation environment.

## Name and function of each part

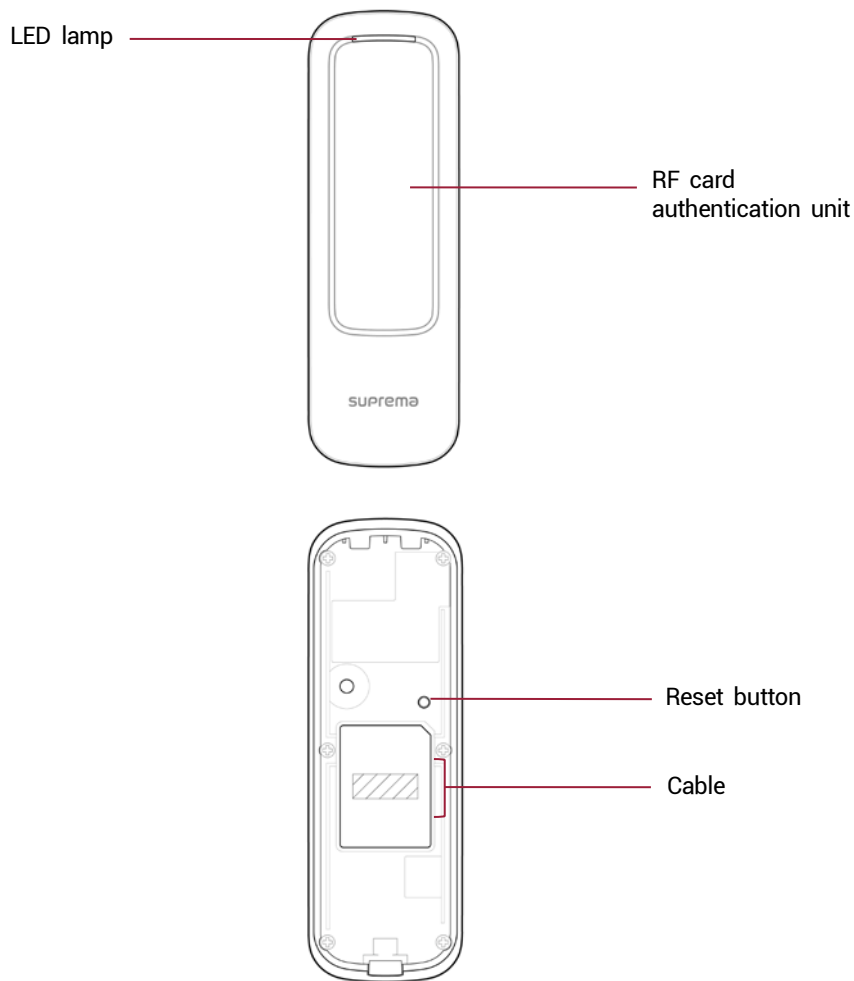

| Name                               | Description   |
|------------------------------------|---|
| <b>LED lamp</b>                    | Indicates the operational status of the device with the color of the LED lamp.  |
| <b>RF card authentication unit</b> | Reads RF cards for entering and exiting.  |
| <b>Reset button</b>                | Initialize the device.  |
| <b>Cable</b>                       | <ul style="list-style-type: none"> <li>• Power cable</li> <li>• RS485 cable</li> <li>• Wiegand output cable</li> <li>• LED input cable</li> <li>• Beep Input cable</li> <li>• Tamper cable</li> </ul> |

## Cables and connectors

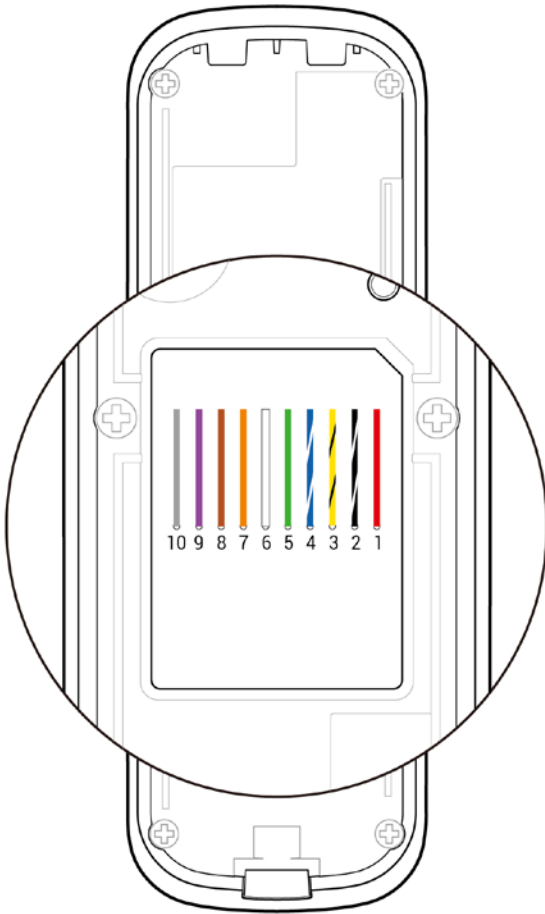


| Pin | Name     | Color                 |
|-----|----------|-----------------------|
| 1   | PWR +VDC | Red                   |
| 2   | GND      | Black (White stripe)  |
| 3   | 485 TRXN | Yellow (Black stripe) |
| 4   | 485 TRXP | Blue (White stripe)   |
| 5   | WG D0    | Green                 |
| 6   | WG D1    | White                 |
| 7   | LED RED  | Orange                |
| 8   | LED GRN  | Brown                 |
| 9   | BEEP     | Purple                |
| 10  | TMPR     | Gray                  |

# Installation


## Fixing the bracket and the product

- 1 Determine the correct position to install the bracket using the provided drilling template. Fix the bracket firmly using fixing screws through the bracket to the position where XPass D2 will be installed.

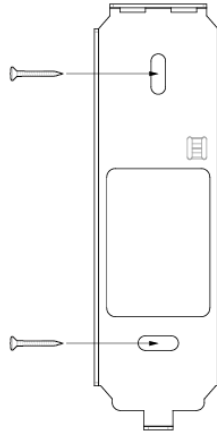


### NOTE

- If installing XPass D2 on a concrete wall, drill holes, insert PVC anchors, and fix them with fixing screws.
- To avoid RF interference, a minimum separation distance must be maintained.

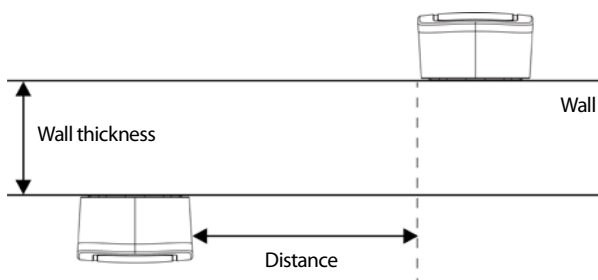


Wall

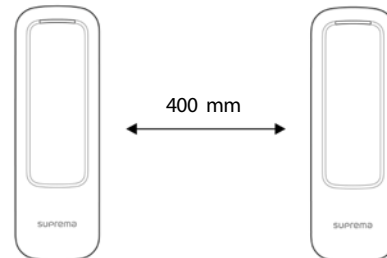

| Wall thickness | Distance |
|----------------|----------|
| 100 mm         | 360 mm   |
| 120 mm         | 360 mm   |
| 150 mm         | 300 mm   |



- 2** Install XPass D2 onto the fixed bracket.

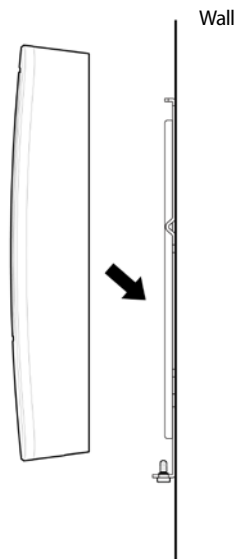

- 3** Assemble XPass D2 with the bracket by rotating the product fixing screw.




**NOTE**

- When assembling the product with the bracket, you can use the included bracket fixing screw(Star Shaped) instead of the product fixing screw for enhanced security.

## Cable connection

XPass D2 can be used as an RFID card reader by connecting to a master device or a CoreStation.


### Power supply connection

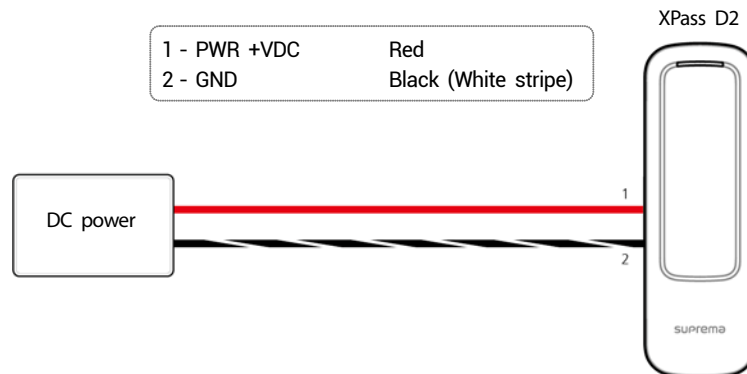

#### NOTE

- Use a power supply adaptor of DC 12 V ( $\pm 10\%$ ) with a minimum of 1,500 mA which has obtained the approval of IEC/EN 60950-1. If you wish to connect and use another device to the power supply adaptor, you should use an adaptor with a current capacity which is the same or larger than the total power consumption required for the terminal and another device.


### RS-485 connection

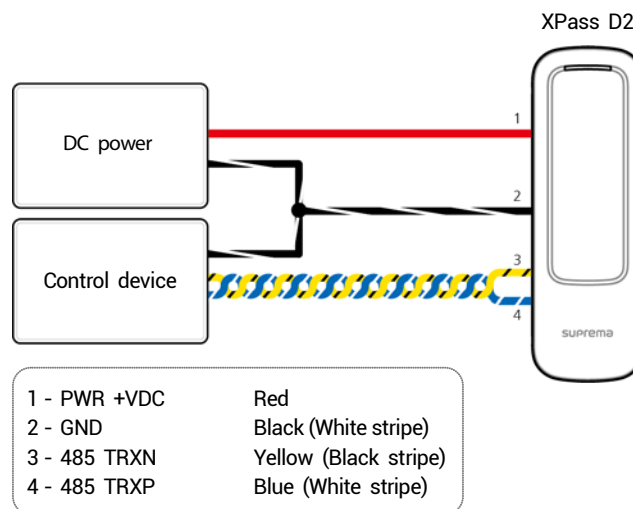

#### NOTE

- Use an AWG24 twisted pair with a maximum length of 1.2 km for the RS-485 cable.
- If connecting with a RS-485 daisy chain, connect the termination resistor (120  $\Omega$ ) to both ends of the daisy chain connection. If connected to the middle line, the signal level becomes smaller and the communication performance will deteriorate. Make sure to connect it to both ends of the daisy chain connection.

## Wiegand and other cable connections

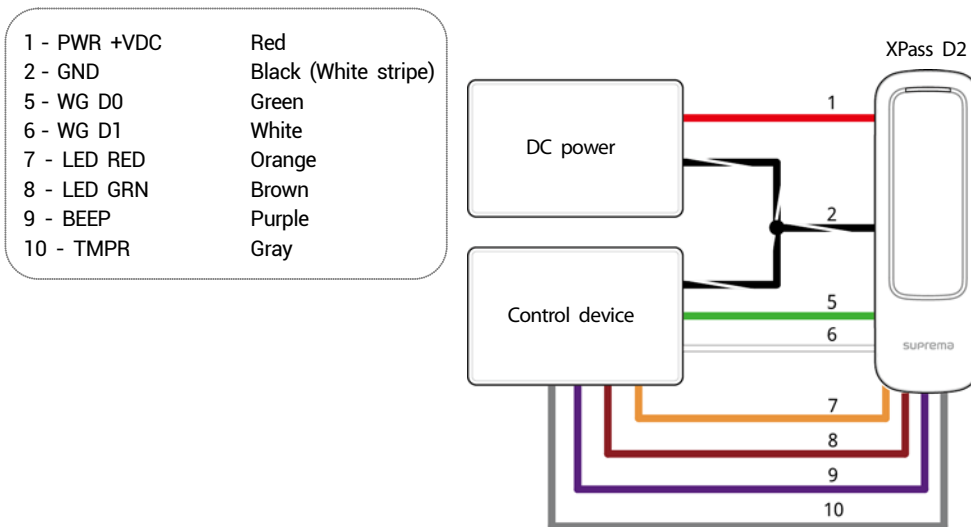

## Restoring the Factory Defaults

This will reset all settings stored on the device.

- 1 Turn the power on.
- 2 Press the reset button three times quickly.
- 3 When the yellow LED is blinking, press the reset button again.

## Resetting the baud rate of RS-485

- 1 Turn the power on.
- 2 Press and hold the reset button for more than 2 seconds. When the device change to setup mode, the yellow LED is blinking.
- 3 Depending on the number of times the reset button was pressed, the baud rate changes. You can recognize the baud rate according to the LED color.

| The number of times | Baud Rate | LED Color |
|---------------------|-----------|-----------|
| 1                   | 9600      | Cyan      |
| 2                   | 19200     | Blue      |
| 3                   | 38400     | Magenta   |
| 4                   | 57600     | White     |
| 5                   | 115200    | Red       |

- 4 The LED blinks for 5 seconds with the color set as the above. The baud rate is set once you hear a beep sound.

### NOTE

- If you do not press the reset button after changing to the setup mode, the baud rate is set to 115200.

## Product specifications



| Category                          | Feature                                | Specification  |
|-----------------------------------|--|--|
|                                   |  | XPD2-MDB   |
| Credential                        | LF card option                         | EM   |
|                                   | HF card option                         | MIFARE, MIFARE Plus, DESFire/EV1, FeliCa                                   |
|                                   | NFC card                               | Supported  |
|                                   | BLE card                               | Supported  |
|                                   | RF read range *                        | MIFARE/DESFire/EM : 50 mm, FeliCa: 30 mm                                   |
| General                           | CPU                                    | 80 MHz   |
|                                   | Memory                                 | 256 KB Flash + 64 KB RAM   |
|                                   | LED                                    | Multi-color  |
|                                   | Sound                                  | Multi-tone Buzzer  |
|                                   | Operating temperature                  | -35 °C - 65 °C   |
|                                   | Storage temperature                    | -40 °C - 70 °C   |
|                                   | Operating humidity                     | 0% - 95 %, non-condensing  |
|                                   | Storage humidity                       | 0% - 95 %, non-condensing  |
|                                   | Dimension (W x H x D)                  | 48 mm x 144.7 mm x 27 mm   |
|                                   | Weight                                 | Device: 117 g<br>Bracket: 30 g (Including washer and bolt)                 |
|                                   | IP rating                              | IP65, IP67   |
|                                   | IK rating                              | IK08   |
|                                   | Certificates                           | CE, FCC, KC, RoHS, REACH, WEEE, SIG  |
| Interface                         | RS-485                                 | 1ch  |
|                                   | Wiegand                                | 1ch  |
|                                   | LED                                    | 2ch  |
|                                   | Beep                                   | 1ch  |
|                                   | Tamper                                 | Supported  |
| Electrical                        | Power                                  | Voltage: DC 12 V, Current: Max. 400 mA<br>* Use 12 VDC, 1.5A power supply. |
|                                   | LED, Beep input V <sub>IH</sub>        | Min. 3 V<br>Max. 5 V   |
|                                   | LED, Beep input V <sub>IL</sub>        | Max. 1 V   |
|                                   | LED, Beep Pull-up resistance           | 4.7k $\Omega$ (The input ports are pulled up with 4.7k $\Omega$ .)         |
|                                   | Wiegand output V <sub>OH</sub>         | Min. 4.8 V   |
|                                   | Wiegand output V <sub>OL</sub>         | Max. 0.2 V   |
| Wiegand output Pull-up resistance | Internally pulled up with 1 k $\Omega$ |  |

\* RF read range will vary depending on the installation environment.

## Dimensions

(Unit: mm)

\* The tolerance is  $\pm 0.3\text{mm}$ .

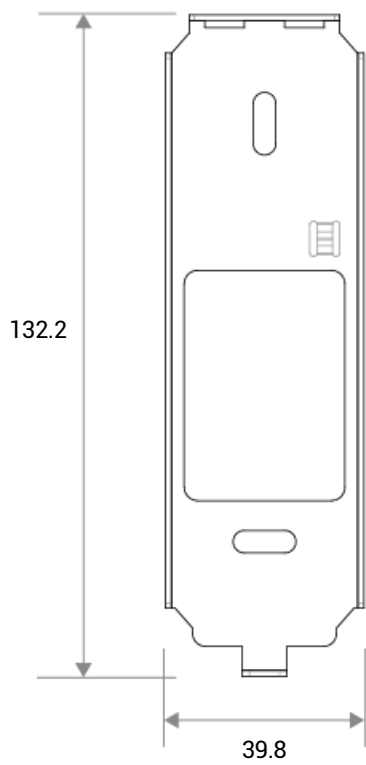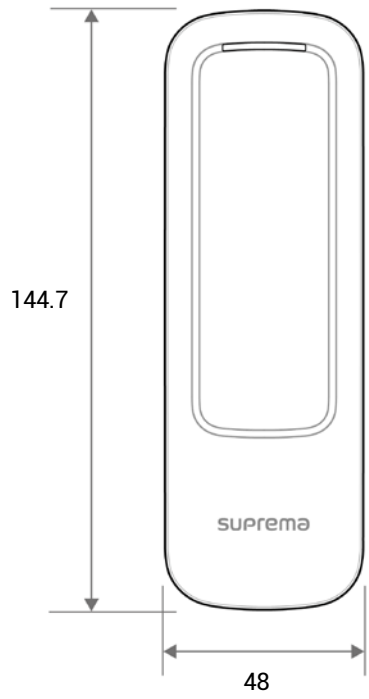

## FCC compliance information

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

This appliance and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter. A minimum separation distance of 20 cm must be maintained between the antenna and the person for this appliance to satisfy the RF exposure requirements.

# Appendices

## Disclaimers

- The information in this manual is provided with regard to the Suprema's products.
- The right to use is acknowledged only for products included in the terms and conditions of the sales agreement guaranteed by Suprema. The right of license to other intellectual property rights not discussed in this manual is not acknowledged.
- Suprema does not guarantee or hold responsibility for the suitability and commerciality of the product for a specific purpose, or the infringement of patent, copyright, or other intellectual property rights with regard to sales or usage of Suprema's products.
- Do not use the product of Suprema under the situations related to medical, rescue of human lives, or maintenance of life, as a person may get injured or lose his/her life due to product malfunction. If an accident occurs while a consumer is using the product under the situations described as examples above, employees, subsidiaries, branches, affiliated companies and distributors of Suprema do not accept responsibility nor will they reimburse for all related direct and indirect expenses or expenditure including attorney fees even if the consumer has discovered any shortcomings in the product design or manufacturing process and claims this as a significant fault.
- Suprema may modify the product size and specifications at any time without proper notice in order to improve the safety, function and design of the product. Designers must keep in mind that functions or descriptions indicated as "to be implemented" or "undefined" may change at any time. Suprema will implement or define such functions or descriptions in the near future and Suprema accepts no responsibility for compatibility issues and any other problems arising from such compatibility issues.
- If you wish to obtain the newest specifications before ordering the product, contact Suprema through a Sales Representative or local distributor of Suprema.

## Copyright notice

The copyright of this document is vested in Suprema. The rights of other product names, trademarks and registered trademarks are vested in each individual or organization that owns such rights.

## Open Source License

### MIT License

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

The logo for Suprema, featuring the word "suprema" in a white, lowercase, sans-serif font. Below it, the words "BIOMETRICS & SECURITY" are written in a smaller, all-caps, sans-serif font. The logo is set against a dark red rectangular background.

**suprema**  
BIOMETRICS & SECURITY

**Suprema Inc.**

16F Parkview Tower, 248, Jeongjail-ro, Bundang- gu, Seongnam-si, Gyeonggi-do, 13554, Rep. of KOREA  
Tel: +82 31 783 4502 | Fax: +82 31 783 4503 | Inquiry: [sales@supremainc.com](mailto:sales@supremainc.com)

©2018 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc. All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies. Product appearance, build status and/or specifications are subject to change without notice.